



iTool™ Videoscope Quick Start Guide




To access your videoscope simply release the security latches and open the case.



Remove the Imaging-Hub and Open the LCD



Attach the power supply and plug the system in to AC or an optional DC battery

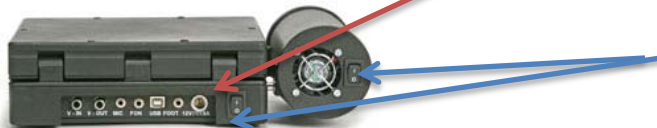

To Power the System turn on the LCD and Light source separately


Carefully remove the videoscope from the storage case. **Warning: Do not remove the videoscope too quickly or it may become jammed**



Connect the 5 pin connector and the light guide



Rotate to adjust light intensity

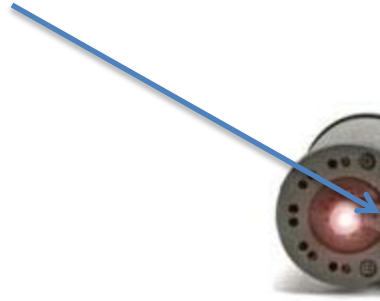

Ensure a Compact Flash card is inserted if you wish to capture images



To capture an image press Blue button on hand piece or “image capture” button on LCD Key board



Articulation of the end of the videoscope is achieved by manipulation of the hand piece controls

Warning: Do Not Attempt to Articulate the Videoscope if the Flexible portion has loops or is tightly coiled. Do Not Force the Articulation or coil the working length of the scope too tightly. Over Torque of the Articulation May result in Damage to the Videoscope.

When you have completed your inspection carefully clean the surface area of the videoscope with a standard household window cleaner.

Carefully return the Videoscope to the storage case. Take care to slowly feed the videoscope in the storage tube.

Warning: Pushing the Videoscope too quickly or violently into the storage container may cause damage or result in the scope becoming jammed in the case.

After cleaning, and returning the videoscope to the storage case, pack the videoscope into the shipping container that arrived with the system or one of equal quality.

Return the system to:

Advanced Inspection Technologies
7777 N Wickham Rd #12-557
Melbourne, FL 32904